


Your Red Light or Horn circuit for loss of Cellular signal

Cellular Antenna Connection

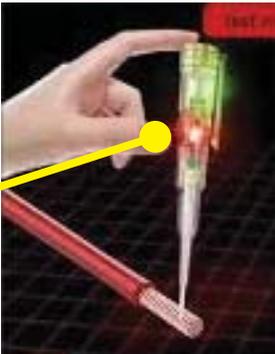

On any inputs if your test lamp lights up then our input LED will also light up.

Must be Neutral or Ground

Must be Hot or 120Vac

\*Note: Inputs 3 - 12 can be connected in any order you wish, the below list is just a suggestion.

- 1-Pump 1 Contactor Phase T1 or Contactor 1 Coil  
See Page 2
- 2-Pump 2 Contactor Phase T1 or Contactor 2 Coil  
See Page 2
- 5-High Water Float
- 6-Low Water Float
- 7-Pump1 Seal Fail
- 8-Pump2 Seal Fail
- 9-Red Light or Horn circuit (must be connectd be for the flasher device)
- 11-Pump1 Contactor OverLoad Fail
- 12-Pump2 Contactor OverLoad Fail

# Pump Run Timer Input Connections

